


Revisions	Description	Part Number	Date	Approved
0	Disposable Dust Mask USE	U3001	09/26/2006	<i>Chen Min Jue</i>

## User Instruction

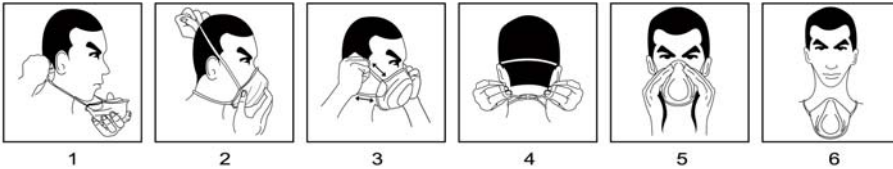

### FITTING INSTRUCTIONS :

1. Hold mask in position over nose and mouth, with retaining straps around back of hand. Pull lower portion of strap over head and fit around neck.
2. Stretch and pull the upper strap over your head on the back of your head above your ears.
3. Adjust the tension in the upper and lower portions of the continuous loop strap, to ensure a positive face seal.
4. Tension may be increased by pulling strap at either side of buckle to obtain a tighter facial fit. Tension may be decreased by pushing out the back of the buckle to obtain a looser facial fit.
5. Cup both hands over the respirator and inhale sharply. A negative pressure should be felt inside respirator. If air flows around your nose, reposition the respirator. If air leaks around the edges, repeat point 3 and 4.
6. During work break, go to a hazard-free environment and then take off the lower portion of strap. Let the respirator hang around the neck.
7. Change respirator immediately if breathing becomes difficult or respirator becomes damaged or distorted, or a proper face fit can not be maintained. Careful observance of these instructions is an important step in safe respirator use.

### WARNING :

1. This product does not eliminate the risk of contracting any disease or infection.
2. Failure to follow all instructions and limitations on the use of this product could reduce the effectiveness of respirator and result in sickness or death.
3. A properly selected respirator is essential to protect your health. Before using this respirator, consult an Industrial Hygienist or Occupational Safety Professional to determine the suitability for your intended use.
4. This product does not supply oxygen. Use only in adequately ventilated areas containing sufficient oxygen to support life. Do not use this respirator when oxygen concentration is less than 19.5%.
5. Do not use when concentrations of contaminants are immediately dangerous to health or life.
6. Leave work area immediately and return to fresh air if (a) breathing becomes difficult, or (b) dizziness or other distress occurs.
7. Facial hairs or beards and certain facial characteristics may reduce the effectiveness of this respirator.
8. Never alter or modify this respirator in any way.
9. Only for single use. No maintenance necessary. Discard the used respirator after single use.
10. Keep respirators in the display box away from direct sunlight until use.
11. Fit test should be performed on the mask which is either qualitative or quantitative.