



National Institute for Occupational Safety and Health
 National Personal Protective Technology Laboratory
 P.O. Box 18070
 Pittsburgh, PA 15236

Procedure No. TEB-APR-STP-0048A	Revision: 2.0	Date: 1 December 2008
---------------------------------	---------------	-----------------------

DETERMINATION OF SULFUR DIOXIDE SERVICE LIFE TEST,
 AIR-PURIFYING RESPIRATORS WITH CARTRIDGES
 STANDARD TESTING PROCEDURE (STP)

1. PURPOSE

This test establishes the procedure for ensuring that the level of protection provided by air purifying respirators with cartridges submitted for Approval, Extension of Approval, or examined during Certified Product Audits meet the minimum sulfur dioxide service life test requirements set forth in 42 CFR Part 84 Subpart L, Section 84.207.

2. GENERAL

This STP describes the Determination of Sulfur dioxide Service Life Test, Air-Purifying Respirators with cartridges test in sufficient detail that a person knowledgeable in the appropriate technical field can select equipment with the necessary resolution, conduct the test, and determine whether or not the product passes the test.

3. EQUIPMENT/MATERIAL

3.1. The list of necessary test equipment and materials follows:

- 3.1.1. Miller Nelson Research Model 401 Flow-Temperature-Humidity Control System (250 Lpm) or equivalent. Air flow control accuracy is $\pm 2\%$ F.S. Temperature control accuracy is $\pm 1^\circ$ C. Humidity control accuracy is $\pm 3\%$ R.H.
- 3.1.2. Edge Tech Dew Prime II Hygrometer, Model 2000 or equivalent. Accuracy is $\pm 0.2^\circ$ C, $\pm 0.5\%$ RH.
- 3.1.3. Interscan Corporation Model RM-24-0 sulfur dioxide detector or equivalent. Detector range: 0 - 1999 ppmv, resolution: 1 ppmv.
- 3.1.4. Interscan Corporation Model RM-24-2 sulfur dioxide detector or equivalent. Detector range: 0 - 19.99 ppmv, resolution: 0.01 ppmv.
- 3.1.5. Mass Flow Controllers, Brooks Instruments, variable flow rate depending on use, model series 5850S and 5853S. Accuracy is 0.7% set point and 0.2% FS.
- 3.1.6. Read Out and Control Electronics, Brooks Instruments, Model 0154.

Approvals: First Level	Second Level	Third Level	Fourth Level

- 3.1.7. American Meter Co. Dry Test Meters Models DTM-325 and DTM-200.
- 3.1.8. Certified cylinders of approximately 5 ppmv and 500 ppmv sulfur dioxide in nitrogen.
- 3.1.9. Sulfur dioxide cylinder, 99 % purity.
- 3.1.10. Electronic balance with accuracy of 0.01 grams (g).
- 3.2. Test fixture for mounting cartridges. The test fixture used is specific to each manufacturer depending on how the cartridge is mounted to the facepiece. In most cases the cartridge cups of the respirator are affixed by hot melt glue to a PVC pipe tee of appropriate size.
- 3.3. The test chamber consisting of an approximately 12" x 12" x 7" air tight box, with 2 clamp type locks on the door opening lined with gasket material, and appropriate inlet, outlet and sampling ports. This fixture is not commercially available.
- 3.4. Refer to the following Work Instructions for further information on performing this test:
TEB-RCT-APR-WI-1008- Laboratory Safety Procedures for Sulfur dioxide Tests
TEB-RCT-APR-WI-1108- Calibration Procedures for Sulfur dioxide Tests
TEB-RCT-APR-WI-1208- Start-Up and Shut-Down Procedures for Sulfur dioxide Tests
TEB-RCT-APR-WI-1308- Using the LabView System for Sulfur dioxide Tests
TEB-RCT-APR-WI-1408 – Reporting Results for Sulfur dioxide Tests

4. TESTING REQUIREMENTS AND CONDITIONS

- 4.1. Prior to beginning any testing, all measuring equipment to be used must have been calibrated in accordance with the testing laboratory's calibration procedure and schedule. All measuring equipment utilized for this testing must have been calibrated using a method traceable to the National Institute of Standards and Technology (NIST) when available.
- 4.2. Any laboratory using this procedure to supply certification test data as a contractor to NIOSH will be subject to the provisions of the NIOSH Supplier Qualification Program (SQP). This program is based on the tenets of *ISO/IEC 17025, the NIOSH Manual of Analytical Methods* and other NIOSH guidelines. An initial complete quality system audit and follow on audits are requirements of the program. Additional details of the Program and its requirements can be obtained directly from the Institute.*
***Note** 4.2 does not apply to Pretest data from applicants as required under 42 CFR 84.64.
- 4.3. Precision and accuracy (P&A) must be determined for each instrument in accordance with laboratory procedures and NIOSH/NPPTL guidance. Sound practice requires, under *NIOSH Manual of Analytical Methods*, demonstrating a tolerance range of expected data performance of a plus or minus 25% of a 95% confidence interval of the stated standard requirement. NIOSH/NPPTL P&A tolerance can be higher but not lower.

- 4.4. The precision and accuracy of this method was determined by validation testing of a single lot of commercially available multi-gas type cartridges. The results of these tests are shown in the table below.

TEST TYPE	MEAN SERVICE LIFE (MINUTES)	STD. DEV.
AS RECEIVED	34.57	0.87
EQUIL. 25% RH	105.74	4.47
EQUIL. 85% RH	210.61	7.30

- 4.5. Normal laboratory safety practices must be observed. Please refer to Material Safety Data Sheets and the current NIOSH Pittsburgh Health and Safety Program for the proper protection and care in handling, storing, and disposing of the chemicals and gases used in this procedure.

- 4.6. The cylinder of 99% sulfur dioxide, as well as the calibration gas cylinders, are typically used inside the laboratory fume hood. If there is a release of 99% sulfur dioxide outside the hood, sound an alarm, and any personnel in the laboratory should immediately exit from the building. Sulfur dioxide is nonflammable.

4.7. SULFUR DIOXIDE BENCH TEST FOR CARTRIDGES

- 4.7.1. Resistance to air flow of the complete respirator will be taken before and after each test (see 42 CFR 84.203). The standard testing procedures are described in TEB-APR-STP-003 and TEB-APR-STP-007.

- 4.7.2. Test conditions as required by 42 CFR 84.207.

SAMPLE	CONDITION	EQUILIBRATION CONDITIONS			TEST CONDITIONS			TEST CONCENTRATION	BREAKTHROUGH CONCENTRATION
		FOR 6 HOURS			TEMP.	FLOWRATE	R.H.	PPMV SO2	PPMV SO2
		TEMP. ° C	FLOWRATE LPM	R.H. %	TEMP. ° C	FLOWRATE LPM	R.H. %		
1-3	AS RECEIVED	NA	NA	NA	25	64	50	500	5
4-5	EQUIL. 25% R.H.	25	25	25	25	32	50	500	5
6-7	EQUIL. 85% R.H.	25	25	85	25	32	50	500	5

Tolerances:

PARAMETER	TOLERANCE
25°C	± 2.5°C
25 LPM	± 0.25 LPM
32 LPM	± 0.50 LPM
64 LPM	± 1.0 LPM
25% R.H.	± 3% R.H.
50% R.H.	± 3% R.H.
85% R.H.	+0/-5% R.H.
500 ppmv	± 10%

NOTES: R.H. levels greater than 85% are difficult to maintain and may cause rapid degradation of service life.

Tolerance on accuracy of air flow rates exceeds specification on Miller Nelson control unit because flow rates are calibrated for every test. This improves the precision of the measurement and allows for the tighter tolerance on short-term drift.

4.7.3. All equilibrated cartridges will be resealed, kept in a position such that the direction of airflow would be horizontal, at room temperature, and testing shall begin within 18 hours.

5. PROCEDURE

Note: Reference Section 3 for equipment, model numbers and manufacturers. For calibration purposes use those described in the manufacturer's operation and maintenance manuals.

- 5.1. Set up the test equipment as shown in Figure 1.
- 5.2. Calibrate the breakthrough SO₂ analyzer using the certified gas cylinder containing the 5 ppmv standard. Calibrate the challenge SO₂ analyzer using the certified gas cylinder containing the 500 ppmv standard.
- 5.3. Establish the correct humidity and temperature for the sample being tested as per the test requirements in paragraph 4.7.
- 5.4. Set the airflow to the required level for the sample being tested as per the test requirements in paragraph 4.7. Calibrate the total airflow, including any additional flow arising from challenge gas flow rates and / or hygrometer flow rates, from the test fixture using the dry test meters.
- 5.5. Weigh the cartridge(s) and record the weight.

- 5.6. Measure initial inhalation and exhalation resistances of the cartridge(s) mounted on the facepiece as described in TEB-APR-STP-003 and TEB-APR-STP-007. Record values on the data sheet.
- 5.7. Make sure diverter valve in the system is diverting the challenge concentration airflow to discharge and not into the testing chamber.
- 5.8. Mount cartridge(s) onto test fixture and place in testing chamber.
- 5.9. Divert 0.5 lpm airflow to the sulfur dioxide challenge detector.
- 5.10. Open the 99% sulfur dioxide cylinder.
- 5.11. Establish the test concentration of 500 ppmv \pm 10% sulfur dioxide by setting the theoretical flow rate of pure sulfur dioxide to mix with the flow of air to produce the required concentration (see table below). Then, set the mass flowmeter to that level, and monitor the challenge concentration on the analyzer. Adjust the flowmeter setting as required. Once the sulfur dioxide concentration has been established and is stable, testing may begin.

FLOW RATE FOR TEST	FLOW RATE OF PURE SULFUR DIOXIDE TO ACHIEVE 500 PPMV
lpm	sccm or mL/min.
32	16
64	32

- 5.12. Monitor and record challenge and breakthrough temperatures, challenge RH and breakthrough values and times throughout testing.
- 5.13. Run test until breakthrough of 5.0 ppmv is observed or minimum service life shown in section 6.2 is surpassed by 10%.
- 5.14. At end of test, system will automatically direct challenge concentration airflow through diverter valve to discharge.
- 5.15. Dismount cartridge(s), weigh and record final weight, and take final inhalation and exhalation resistances as described in TEB-APR-STP-003 and TEB-APR-STP-007. Measurement of the final inhalation and exhalation resistances is required for certification and audit testing.
- 5.16. If there is another sample to test, repeat steps 5.5 – 5.15.
- 5.17. After all tests are completed for the shift, set temperature and humidity to zero on the Miller Nelson system and allow clean air to pass through the system for 30 minutes. Purge the breakthrough and challenge detectors with clean air for 15 minutes.

6. PASS/FAIL CRITERIA

6.1. The requirement for passing this test is set forth in 42 CFR Part 84 Subpart L, Section 84.207.

6.2. Minimum service life requirements for cartridges are shown below.

Cartridge	Test condition	Test atmosphere		Flowrate (l.p.m.)	Number of tests	Penetration ¹ (p.p.m.v.)	Minimum service life (min.) ²
		Gas or vapor	Concentration (p.p.m.v.)				
Sulfur dioxide	As received	SO ₂	500	64	3	5	15 / 30
Sulfur dioxide	Equilibrated	SO ₂	500	32	4	5	15 / 30

¹Minimum life will be determined at the indicated penetration.

²Where a respirator is designed for respiratory protection against more than one type of gas or vapor, as for use in ammonia and in chlorine, the minimum life shall be 15 minutes. Where a respirator is designed for respiratory protection against one or more than one gas of a single type, as for use in chlorine and sulfur dioxide, the minimum life shall be 30 minutes.

7. RECORDS/TEST SHEETS


7.1. Record the test data in a format that shall be stored and retrievable.

8. ATTACHMENTS

8.1. Figure 1- Bench-Top Set-Up


8.2. Data Sheet

8.1. Figure 1- Bench-Top Set-Up

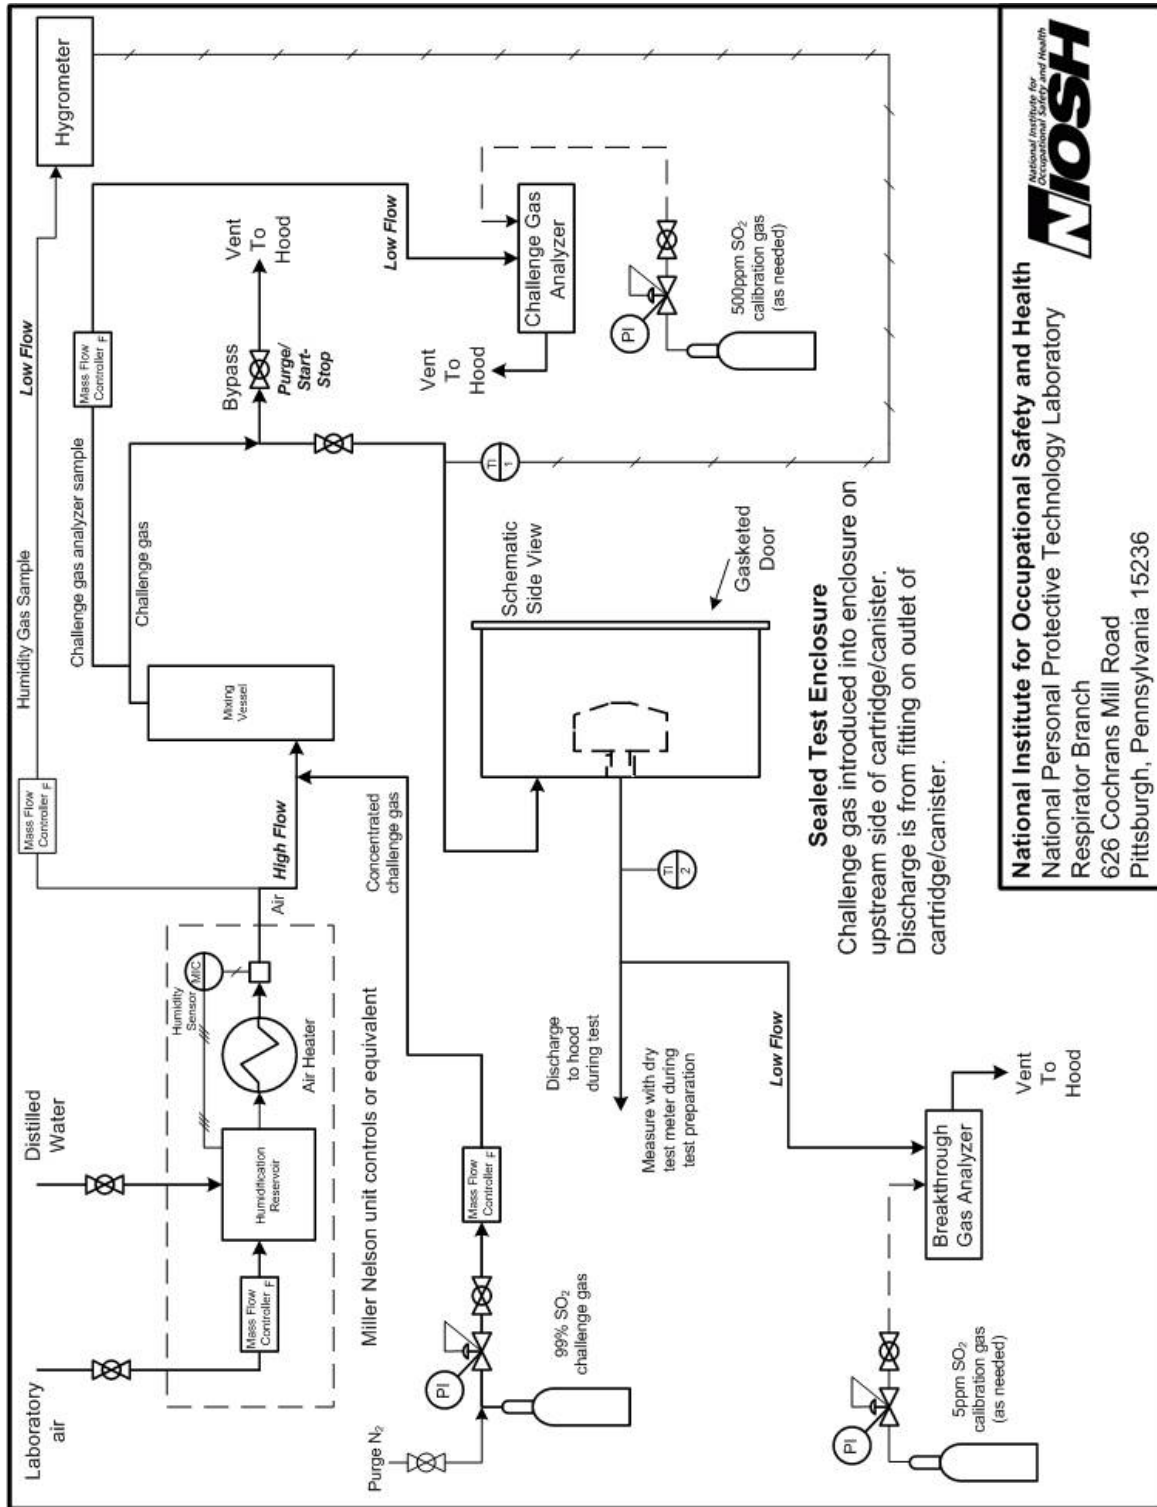

8.2. Data Sheet

RB - RESPIRATOR CERTIFICATION TEAM GAS & VAPOR RESPIRATOR TEST DATA SHEET (Ref.33-48,50,62) STP No.: [_____] Task Number: TN- _____ Gas Name: _____ Manufacturer: _____ Item Tested: _____									
RESISTANCE	Maximum Allowable Resistance (mm of H ₂ O)				Actual Resistance (mm of H ₂ O)				Result
	Inhalation		Exhalation		Inhalation		Exhalation		
	Test		Initial		Initial	Final	Initial	Final	
1									
2									
3									
4									
5									
6									
7									
Overall Results: Pass _____ Fail _____ Comment: _____									
WEIGHTS AND AIRFLOWS	WEIGHTS (g)				AIRFLOW (Lpm)				
	Test	Con'd	Conc. (ppmv)	Conc. (ppmv)	Test Rate		(PAPR Only)		
					RH%	Lpm	Initial	Final	
1									
2									
3									
4									
5									
6									
7									
Overall Results: Pass _____ Fail _____ Comment: _____									
DATA TABLE	Test Cond.	Final Time (min)	Leakage (ppmv)	Temperature (°C)				Corrected Time (min)	
				tream	Dns	eam	Upstr		
1									
2									
3									
4									
5									
6									
7									
Overall Results: Pass _____ Fail _____ Comment: _____									
Was all testing equipment in calibration throughout all testing: Yes _____ No _____ Signature: _____ Date: _____									

 <p>NIOSH <small>National Institute for Occupational Safety and Health</small> <i>RB - RESPIRATOR CERTIFICATION TEAM</i> <i>Page 2</i> <i>GAS & VAPOR RESPIRATOR TEST DATA SHEET (Ref.33-48,50,62)</i> STP No.: [_____] Task Number: TN- _____ Gas Name: _____ Manufacturer: _____ Item Tested: _____</p>
--

<p>Additional Comments:</p> <p style="text-align: center;">Signature: _____ Date: _____</p>

Revision History

Revision	Date	Reason for Revision
1.0	14 March 2002	Historic document
1.1	30 June 2005	Update header and format to reflect lab move from Morgantown, WV No changes to method
2.0	1 December 2008	Significant rewrite of RCT-APR-STP-0048. Changes affect form and provide clarification of technical content.