



National Institute for Occupational Safety and Health
 National Personal Protective Technology Laboratory
 P.O. Box 18070
 Pittsburgh, PA 15236

Procedure No. TEB-APR-STP-0519-CBRN	Revision: 0.1	Date: 9 February 2009
-------------------------------------	---------------	-----------------------

DETERMINATION OF CBRN HYDRIDE GASES (PHOSPHINE) SERVICE LIFE
 TEST, LOOSE-FITTING POWERED AIR-PURIFYING RESPIRATORS (PAPR)
 STANDARD TEST PROCEDURE (STP)

1. PURPOSE

This test establishes the procedure for ensuring that the level of protection provided by the *CBRN Hydride Gases (Phosphine) Service Life, Loose-Fitting Powered Air-Purifying Respirators (PAPR) Standard Test Procedure* submitted for Approval, Extension of Approval, or examined during Certified Product Audits meet the minimum certification standards set forth in *42 CFR, Part 84, Subpart G, Section 84.63(a)(c)(d)*; Volume 60, Number 110, June 8, 1995 and the *Statement of Standard for Chemical, Biological, Radiological, and Nuclear (CBRN) Powered Air-Purifying Respirator (PAPR)*.

2. GENERAL

This STP describes the *Determination of CBRN Hydride Gases (Phosphine) Service Life Test, Loose-Fitting Powered Air-Purifying Respirators* test in sufficient detail that a person knowledgeable in the appropriate technical field can select equipment with the necessary resolution, conduct the test and determine whether the product passes the test.

3. EQUIPMENT AND MATERIAL

3.1. The list of necessary test equipment and materials follows:

- 3.1.1. Flow-Temperature-Humidity Control System or equivalent. Miller-Nelson (MN) control system, Model HCS-401. An automated system to control the airflow, temperature, and humidity of an air supply for an operating system. Laboratory air and distilled water are supplied to the unit; the three sensors and controlling mechanisms are incorporated electronically. The capacity of the unit is airflow: 20 to 200 liters / minute \pm 2%), relative humidity: 20 to 90 \pm 3 % and temperature ambient to 35 °C \pm 1°C.
- 3.1.2. EdgeTech Dew Prime II Hygrometer, Model 2000 or equivalent. A micro-processor based programmable chilled mirror dew point hygrometer. The hygrometer uses the dew point and ambient temperature to calculate the relative humidity. Ambient temperature range is: -50°C to 130°C \pm 0.2°C; relative humidity is 1% to 95% \pm 0.5%
- 3.1.3. Labview software developed for NIOSH Service Life Testing.

Approvals: First Level	Second Level	Third Level	Fourth Level

- 3.1.4. California Analytical Instruments, Model 1314 Photoacoustic Multigas Monitor with UA0970 optical filter or equivalent. This monitor uses photoacoustic infrared detection to measure gases that absorb infrared light. A filter is used to select the wavelength specific for the gas being detected. Range for phosphine is 10000 to 1.0 ppm \pm 0.1 ppm.
- 3.1.5. CEA Model TG-4000BA Phosphine detector or equivalent. This detector uses electrochemical sensor for detection of phosphine. It has an internal vacuum pump for drawing the sample. Range is 0 to 1 ppm.
- 3.1.6. Mass Flow Controller, Brooks Instruments, variable flow rate depending on use.
- 3.1.7. Read out and Control Electronics, Brooks Instruments, Model 0154. Power supply and controller for the Brooks Mass Flow Controller or equivalent. The flow controllers are an integrally mounted control valve module with which stable gas flows can be achieved. Various flow rates are used with an accuracy of \pm 0.7 % of rate and \pm 0.2 % full scale.
- 3.1.8. Dry Test Meter. American Meter Co., model and size depending on air flow rate to be measured. Must have NIST traceable calibration certificate.
- 3.1.9. Certified cylinder of approximately 1 ppm and 150 ppm phosphine.
- 3.1.10. Phosphine cylinder, 99% purity, with regulator and purge valve.
- 3.1.11. Nitrogen cylinder, 99% purity.
- 3.2. Test fixture for mounting cartridges.
- 3.3. The test chamber consisting of an air tight box with door opening lined with gasket material. Two fittings located on the test chamber for the introduction of the test concentration and for the exit of the test fixture. This fixture is not commercially available.
- 3.4. Airflow measurement equipment as described in standard test procedure RCT-APR-00012.

4. TESTING REQUIREMENTS AND CONDITIONS

- 4.1. Prior to beginning any testing, all measuring equipment to be used must have been calibrated in accordance with the manufacturer's calibration procedure and schedule. At a minimum, all measuring equipment utilized for this testing must have been calibrated within the preceding 12 months using a method traceable to the National Institute of Standards and Technology (NIST).
- 4.2. Any laboratory using this procedure to supply certification test data to NIOSH will be subject to the provisions of the NIOSH Supplier Qualification Program (SQP). This

program is based on the tenets of ISO/IEC 17025, the NIOSH Manual of Analytical Methods and other NIOSH guidelines. An initial complete quality system audit and follow on audits are requirements of the program. Additional details of the Program and its requirements can be obtained directly from the institute.

- 4.3. Precision and accuracy (P&A) must be determined for each instrument in accordance with laboratory procedures and NIOSH/NPPTL guidance. Sound practice requires, under *NIOSH Manual of Analytical Methods*, demonstrating a tolerance range of expected data performance of a plus or minus 25% of a 95% confidence interval of the stated standard requirement. NIOSH/NPPTL P&A tolerance can be higher but not lower.
- 4.4. Compressed gas cylinders must meet all applicable Department of Transportation requirements for cylinder approval as well as retesting / requalification.
- 4.5. Normal laboratory safety practices must be observed. This includes safety precautions described in the current NIOSH Pittsburgh Health and Safety Program.
 - 4.5.1. Safety glasses, lab coats and hard-toe shoes must be worn at all times.
 - 4.5.2. Workbenches must be maintained free of clutter and non-essential test equipment.
 - 4.5.3. When handling any broken glass laboratory equipment, lab technicians and personnel must wear special gloves, which protect against lacerations or punctures.
- 4.6. **Please refer to Material Safety Data Sheets and the NIOSH Health and Safety Manual for the proper protection and care in handling, storing, and disposing of the chemicals and gases used in this procedure.**

5. PROCEDURE

Note: Reference Section 3 for equipment, model numbers and manufacturers. For calibration purposes use those described in the manufacturer's operation and maintenance manuals.

- 5.1. Follow individual instruction manuals for set up and maintenance of equipment used in this procedure prior to beginning testing. Malfunctioning equipment must be repaired or replaced and properly set up and calibrated before starting all tests.
- 5.2. Calibrate photoacoustic monitor for phosphine using certified gas cylinder containing approximately 150 ppm phosphine.
- 5.3. Calibrate the CEA phosphine monitor for phosphine using certified gas cylinder containing approximately 0.3 ppm phosphine.
- 5.4. Set up test equipment as shown in Figure 1. The humidity reading controlled by the Miller Nelson system and monitored the Dew Point Hygrometer. The sample pickup for

the hygrometer is placed into the air stream via a tee after the Miller Nelson and before the introduction point of challenge agent. The thermocouple for the hygrometer is placed in the challenge gas stream immediately before the test chamber.

- 5.5. Verify the following equipment is on:
 - 5.5.1. Miller Nelson Unit.
 - 5.5.2. Air and water supplies.
 - 5.5.3. NIOSH Service Life Apparatus Controller software program.
- 5.6. Set the required airflow for the system. Individual cartridges will be tested by dividing 170 Lpm by the number of air-purifying elements on the system. See appendix 8.3. Verify the airflow from the test fixture using the appropriate dry test meter.
- 5.7. Weigh and record initial weight of the test cartridge on Test Data Sheet.
- 5.8. Take and record initial airflow measurements in accordance with RCT-APR-012. See section 84.1702 (b) Title 42, Code of Federal Regulations, Part 84 for minimum airflow requirements.
- 5.9. Make sure the diverter valve in the system is diverting the challenge concentration airflow to discharge and not into the testing chamber.
- 5.10. Mount cartridge onto test fixture and place in testing chamber.
- 5.11. At the phosphine regulator, using the purge valve introduce dry nitrogen or dry air into the challenge introduction for five minutes. This should purge any contaminants and moisture from the phosphine introduction system. The system should be clear of residual moisture.
- 5.12. Start Nitrogen Dilution mass flow controller and set flow rate.
- 5.13. Miller Nelson Unit with the humidity turned down to zero. Set airflow to system.
- 5.14. Check the airflow from at the test fixture using the dry test meter.
- 5.15. Shut off nitrogen purge flow, open Phosphine cylinder with phosphine mass flow controller set at "0". Gradually, open mass flow controller to establish the test concentration for 150 ppm \pm 15 ppm phosphine.
- 5.16. Connect tubing from the tee in the airflow line to the phosphine challenge detector.
- 5.17. Once the test concentration of 150 ppm \pm 15 ppm phosphine has been established, testing may begin.

Procedure No. TEB-APR-STP-0519-CBRN	Revision: 0.1	Date: 9 February 2009	Page 5 of 10
-------------------------------------	---------------	-----------------------	--------------

- 5.18. Direct challenge concentration airflow into test chamber.
 - 5.19. Start timer. Monitor effluent concentration. Monitor upstream and downstream temperatures throughout testing, record beginning and final temperatures on the test data sheet.
 - 5.20. Run test until breakthrough of 0.3 ppm is observed or selected service life time is surpassed.
 - 5.21. Direct challenge concentration airflow out of the test cartridge.
 - 5.22. Weigh and record final weight of the test cartridge on Test Data Sheet.
 - 5.23. Take and record final airflow measurements in accordance with RCT-APR-012. See section 84.1702 (b) Title 42, Code of Federal Regulations, Part 84 for minimum airflow requirements.
 - 5.24. Allow clean air to purge through the test chamber.
 - 5.25. Repeat steps 5.6 through 5.25 for each test described in section.
 - 5.26. When all tests are completed, turn off phosphine cylinder, set temperature and humidity to zero and allow air to pass through the system for 30 minutes.
 - 5.27. Open dry nitrogen Purge Valve on regulator, to clear system of residual phosphine. Allow nitrogen to purge through system for 10 - 15 minutes.
6. PASS OR FAIL CRITERIA
- 6.1. The criterion for passing this test is set forth in 42 CFR, Part 84, Subpart G, Section 84.63(a)(c)(d) and Subpart I, Section 84.110(c); Volume 60, Number 110, June 8, 1995.
 - 6.2. This test establishes the standard procedure for ensuring that:
 - 84.63 Test requirements; general.
 - (a) Each respirator and respirator component shall when tested by the applicant and by the Institute, meet the applicable requirements set forth in subparts H through L of this part.
 - (c) In addition to the minimum requirements set forth in subparts H through L of this part, the Institute reserves the right to require, as a further condition of approval, any additional requirements deemed necessary to establish the quality, effectiveness, and safety of any respirator used as protection against hazardous atmospheres.
 - (d) Where it is determined after receipt of an application that additional requirements will be required for approval, the Institute will notify the applicant in writing of these additional requirements, and necessary examinations, inspections, or tests, stating

generally the reasons for such requirements, examinations, inspections, or tests.

6.3. Hydride Gas (Phosphine) test for CBRN cartridges

6.3.1. Airflow measurements of system must be taken before and after each test.

6.3.2. Three cartridges will be tested at the determined Lpm, continuous airflow, 25 % \pm 2.5 % relative humidity (RH), 25 °C \pm 2.5 °C and 150 ppm phosphine.

6.3.3. Three cartridges will be tested at the determined Lpm, continuous airflow, 80 % \pm 2.5 % relative humidity (RH), 25 °C \pm 2.5 °C and 150 ppm phosphine.

6.3.4. Minimum service life will be 15, 30, 45, 60, 90 or 120 minutes as per manufacturer request. End of service life concentration is 0.3 ppm phosphine.

7. RECORDS AND TEST SHEETS

7.1. All test data will be recorded on the PHOSPHINE SERVICE LIFE test data sheet.

7.2. All videotapes and photographs of the actual test being performed, or of the tested equipment shall be maintained in the task file as part of the permanent record.

7.3. All equipment failing any portion of this test will be handled as follows:

7.3.1. If the failure occurs on a new certification application, or extension of approval application, send a test report to the RCT Leader and prepare the hardware for return to the manufacturer.

7.3.2. If the failure occurs on hardware examined under an Off-the-Shelf Audit the hardware will be examined by a technician and the RCT Leader for cause. All equipment failing any portion of this test may be sent to the manufacturer for examination and then returned to NIOSH. However, the hardware tested shall be held at the testing laboratory until authorized for release by the RCT Leader, or his designee, following the standard operating procedures outlined in Procedure for Scheduling, and Processing Post-Certification Product Audits, RB-SOP-0005-00.


8. APPENDIXES

8.1. Bench Top Set-Up

8.2. Test Data Sheet

8.3. Service life testing airflow calculations

8.1. Bench Top Set-Up

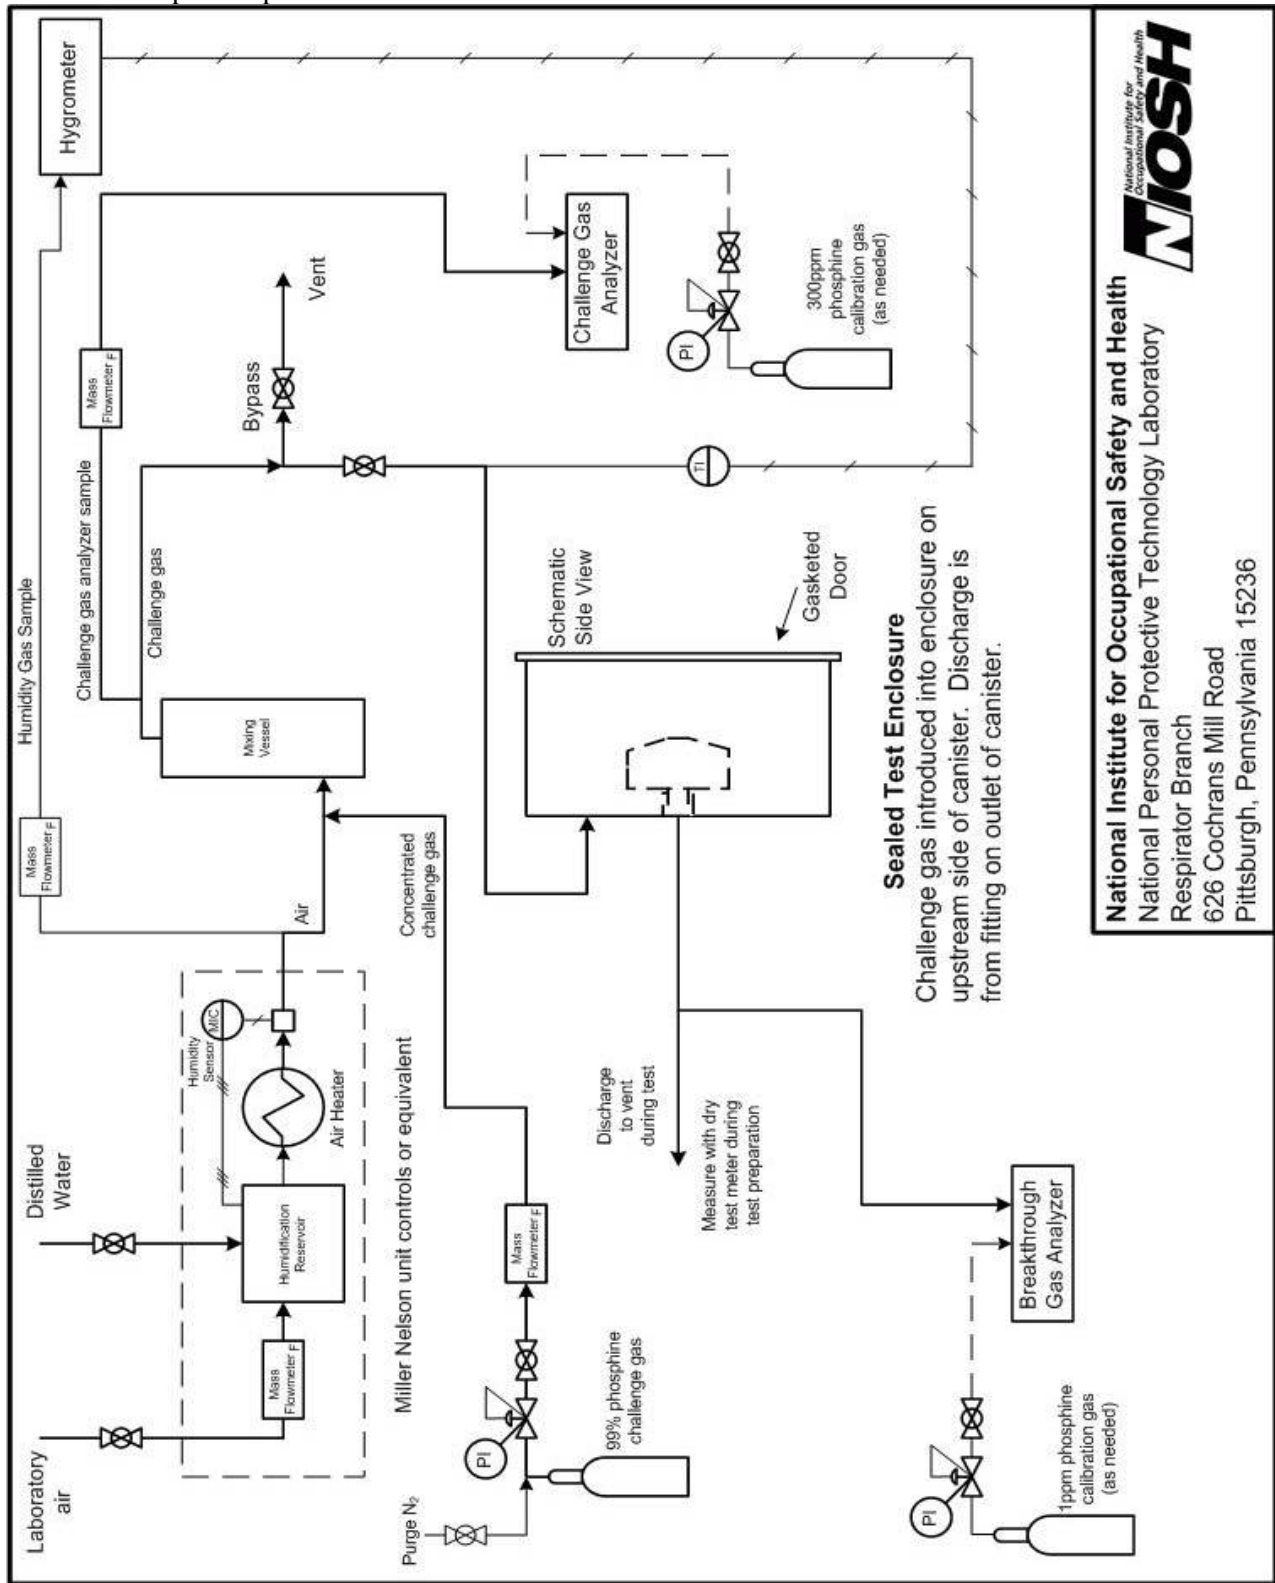

8.2. Test Data Sheet

Data Type: _____

Task Number: _____ Company: _____

Description: _____

Test Date: _____ #: _____ Test Time: _____

Canister Initial	Canister Final	Inhalation Resistance Canister only		Inhalation Resistance System		Exhalation Resistance System		Flow	Conc	
		Initial in H2O	Final in H2O	Initial in H2O	Final in H2O	Initial in H2O	Final in H2O		Lpm	ppm
grams	grams									

Time	Leakage	Temperature Downstream	Temperature Upstream	Remarks:

Test Date: _____ #: _____ Test Time: _____

Canister Initial	Canister Final	Inhalation Resistance Canister only		Inhalation Resistance System		Exhalation Resistance System		Flow	Conc	
		Initial in H2O	Final in H2O	Initial in H2O	Final in H2O	Initial in H2O	Final in H2O		Lpm	ppm
grams	grams									

Time	Leakage	Temperature Downstream	Temperature Upstream	Remarks:

Test Date: _____ #: _____ Test Time: _____

Canister Initial	Canister Final	Inhalation Resistance Canister only		Inhalation Resistance System		Exhalation Resistance System		Flow	Conc	
		Initial in H2O	Final in H2O	Initial in H2O	Final in H2O	Initial in H2O	Final in H2O		Lpm	ppm
grams	grams									

Time	Leakage	Temperature Downstream	Temperature Upstream	Remarks

Test Operator _____

8.3. Service-life testing airflow calculations

Loose-fitting PAPR

_____ Number of filtering elements on a loose-fitting PAPR System.

170 Lpm airflow

Airflow for service life test = 170 Lpm / number of filtering elements

Test Flow			
4 Cartridges	3 Cartridges	2 Cartridges	1 Cartridge
42.5 Lpm	56.7 Lpm	85 Lpm	170 Lpm

Revision History

Revision	Date	Reason for Revision
0.0	21 November 2006	Original Issue
0.1	9 February 2009	Name changed in alignment with current naming convention, minor editorial revision, no change to procedure